

## HOW TO SET UP YOUR FLOOR SCALE:

1. **Remove** PLATFORM from skid or **pallet corners** from scale feet.
2. Set platform on level floor and **extend feet** ½” to 1”. Make sure platform **does not rock or wobble** on floor.
3. **Tighten** jam nuts on feet.
4. If using ramp, position it against scale and **secure** to floor with **tabs** on side of ramp.
5. Locate **indicator** near scale and **secure** to **wall or table**. **Protect** indicator cable to **avoid** damage.
6. **Plug** indicator cable into indicator and A/C power cord into wall outlet unless your indicator is battery powered.
7. **Turn** indicator **ON**, allow it to warm up, **push ZERO** and you are ready to weigh.

INDICATOR CABLE IS UNDER PLATFORM.

If you ordered an ICS model floor scale, the indicator ships separately.

If you ordered a Triner model floor scale, the indicator may be located inside the top access panel on the scale.