

BCS The calibration procedure

1. Power On , when system begins the action.

Press ZERO, UNIT key in the same time for 5 seconds.

SEt-1

2. Press UNIT key,

SEt-11

This is to set up the calibration weight unit in metric system.

3. Press UNIT key,

XXXX

This value is between 5500 ~ 6500

4. Press ZERO key

LCD left below corner side will show ZERO, then turn off

XXXX

5. Put 30 kg standard weight unit on the scale

XXXXXX

6. When LCD indicated value has stable, press UNIT

LCD left below corner will showed TARE, then turn off.

7. Press ZERO, UNIT key in the same time.

XX.XXX

You should to amend the indicated value to fit the standard weight unit. For example, you use 30 kg weight unit. You should to input 30.000 this value to LCD. The input way is Press UNIT to shift the digits

Press ZERO to change the indicated value

30.000

8. When you have input the indicated value(the weight unit value),

Press ZERO, UNIT key in the same time. The system will be re-auto-zero then the calibration will be completed.